



Hunter Controllers
CONTROLLER RESET PROCEDURES

There is a process that will reset the memory to the factory defaults and erase all programs and data. Please follow the instructions below for your model. This is a requirement before warranty can be processed.

XC Hybrid

1. Press and hold the PRG button
2. Press and release the reset button in the lower wiring compartment
3. Wait 2 seconds and release the PRG button
4. The display should now show 12:00am



X Core

1. Press and hold the -, → and PRG button
2. Press and release the reset button on the side of the controller
3. Wait 2 seconds and release the -, → and PRG button
4. The display should now show 12:00am



Pro C/PCC

1. Press and hold the PRG button
2. Press and release the reset button on the back of the front panel
3. Wait until the display shows 12:00am
4. Release the PRG button



ICC

1. Turn the dial to RUN
2. Press and hold the -, → and PRG buttons
3. Press and release the reset button on the back of the front panel
4. Release the -, → and PRG buttons
5. The display should now show 12:00am



I Core

1. Turn the dial to the ADVANCED FEATURES position
2. Use the ↑ ↓ to select ERASE ALL and use the + button to enter
3. Press and hold the + button to erase all memory from the controller
4. The display will briefly inform you to please wait and then indicate when the reset is done



Node

1. From the Idle Mode, press and hold the -, → and PRG buttons
2. After 2 seconds the screen will go blank, continue to hold buttons
3. 12:00 will flash on the display, release the buttons
4. The controller may show countdown from 10 to 1 on the display, then 12:00 will be shown flashing



ACC

1. Turn the dial to the RUN position
2. Press and hold the PROGRAMS button and at the same time press in the recessed RESET button with the tip of a pen
3. Release the RESET button but continue to hold the PROGRAM button until the Reset Memory screen appears, then release the PROGRAM button
4. Use the ↑ ↓ to highlight ALL DATA
5. Press the + button to select
6. Confirm the reset by pressing + again

